





Montage & Service Handleiding CELO WAND

Famostar
emergency lighting

MONTAGE

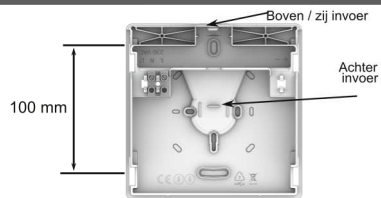


1 Bepaal de invoeropening en plaats eventueel een tule of wartel. Monteer de montagebak op de wand.

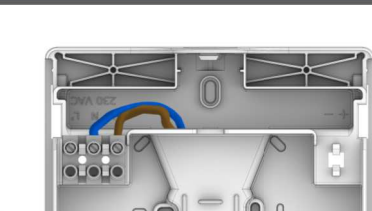


2 Sluit de bedrading aan volgens het aansluitschema.



3 Bij invoer vanaf de linkerzijkant:
- verwijder de accu & draai de torx schroef los
- draai de lensrotator 90°
- draai de torx schroef aan & plaats de accu terug

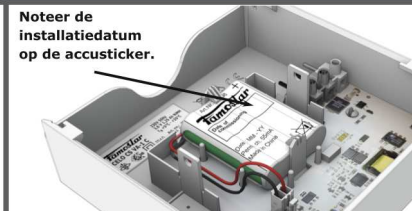



4 Plaats de accustekker.

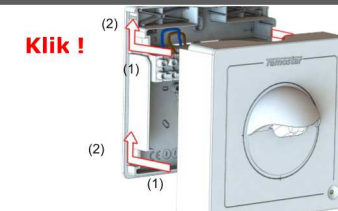

5 Monteer de lichtunit:
(1) door deze over de montagebak te plaatsen.
(2) en vervolgens in de richting van de zij invoer te schuiven.



AANSLUITSCHEMA

 CELO CW V-230

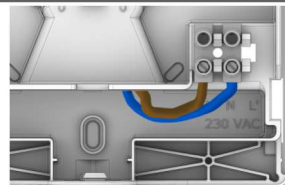


Centraal gevoed

 
CELO CW VPA-1

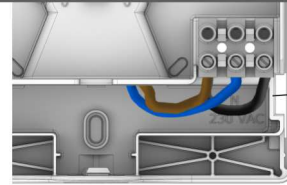

Permanent

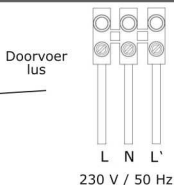

Doorvoer lus

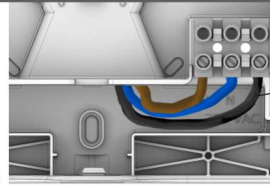

Schakelbaar

Schakeldraad

Voor DALI uitvoering:
zie DALI handleiding.


TESTSCHEMA

STATUSINDICATIE:

- Normaal / Accu wordt opgeladen
- Autonomie niet gehaald
- Accu Storing
- Led storing
- Elektronica storing

ATS CYCLUS:

Automatisch
Test
Systeem

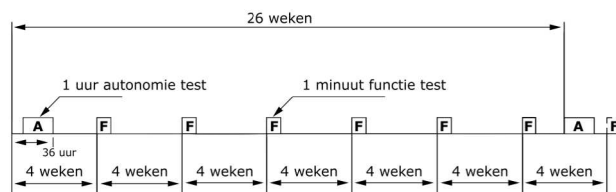


ONDERHOUD




1 Reinig de armatuur elk jaar. Houd het logboek up-to-date na inspectie. Onderhoud volgens ISSO publicatie 79.



2 Controleer of de lensrotator nog steeds in de juiste positie staat.

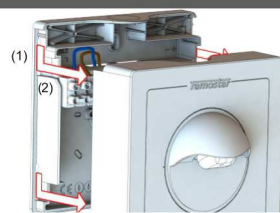

3 Demonteer de lichtunit:
(1) door deze m.b.v. een beheerste klap met een rubber hamer of vuist neerwaarts te schuiven,
(2) en de lichtunit van de muur af te trekken.

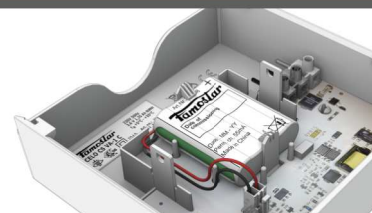

4 Vervang de accu elke 8 jaar of als de autonomiesysteemtest niet wordt gehaald. Noteer de installatiedatum op de sticker van de nieuw geplaatste accu.

SPECIFICATIES

Type	Spanning	Opgenomen vermogen*	Stroom*	Power factor
CELO CW VPA-1	230 V / 50 Hz	2,5 W / 4,6 VA	20 mA	0,55
CELO CW V-230	230 V / AC/DC	2,75 W / 5,3 VA	23 mA	0,51

*maximale waarden bij ingeschakelde lichtbron en niet volledig geladen accu



LET OP: De armatuur moet zodanig worden gemonteerd dat langdurig staren in de lichtbron, op een afstand kleiner dan 0,45 meter, niet aanmerkelijk is.

Montage	Op normaal onvlambare oppervlaktes.
Alleen voor vaste aansluiting	Aansluiten met XMVK, YMKV of gelijkwaardig
Temperatuurbereik	+5 °C tot +30 °C (V-230 +5 °C tot +40 °C)
Afmetingen	Zie www.famostar.nl
Autonomie	1 uur
Lichtbron	Led
Lichtstroom	180 Lumen
Accu	3,6 V 1,1 Ah NIMH (AA cel)
Beschermingsklasse	IP 40
ATS	Automatisch Test Systeem (IEC 62034)
Isolatieklasse	Klasse II, toestellen hoeven niet geaard te worden.
Materiaal	Polycarbonaat (PC)

Garantie, toebehoren, afstandstabellen en verdere informatie zie www.famostar.nl.




CELO Wand



Mounting & Service Manual CELO Wall

Famostar
emergency lighting

MOUNTING

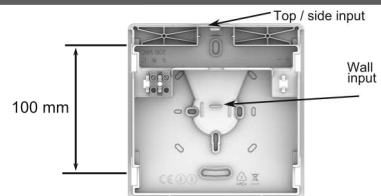


1 Determine cable input opening. If necessary, place a grommet or cable gland. Mount the mounting plate.



2 Connect the wires according to the wiring diagram.




3 By use of the left side input:
- remove the battery & unscrew the torx screw
- rotate the lens rotator 90°
- fasten the torx screw & replace the battery

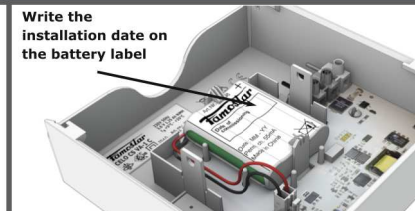

Write the installation date on the battery label

4 Put the battery connector in position.


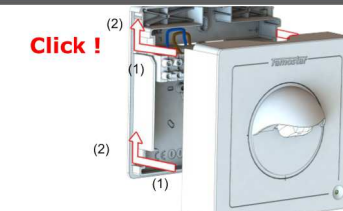


Click !

5 Mount the lightunit:
(1) by placing it over the mounting plate.
(2) and slide it into the direction of the side input.



WIRING DIAGRAM

 CELO CW V-230

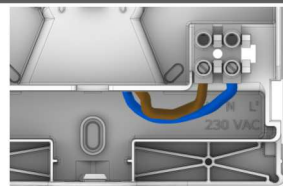


Centrally supplied

 
CELO CW VPA-1

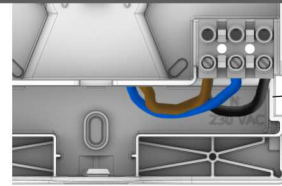

Maintained

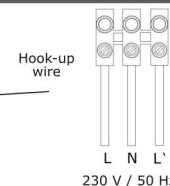

Hook-up wire

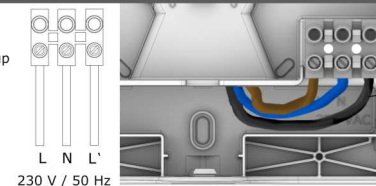

Switchable

Switched livewire

For DALI version:
see DALI manual.

TESTING

STATUS INDICATION:


- Normal / Battery is being charged
- Required autonomy not achieved
- Battery failure
- Led failure
- Electronic failure

ATS CYCLE:

Automatic

Test


System

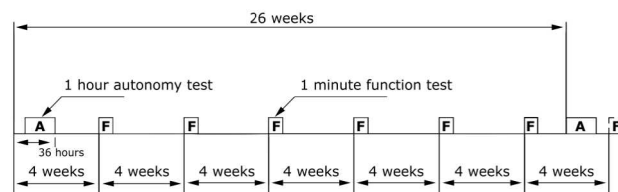


SERVICE




1 Clean the luminaire every year.
Keep the logbook up-to-date after inspection.
Maintenance according ISSO publication 79.

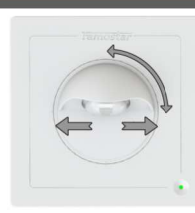

2 Check if the lensrotator is still in the right position.

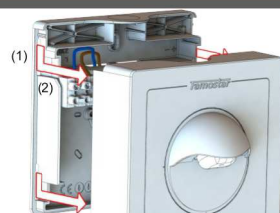

3 Remove the lightunit from the mounting plate:
(1) by sliding it sideways through a composed hit with a rubber hammer or fist,
(2) and pulling the lightunit downwards.

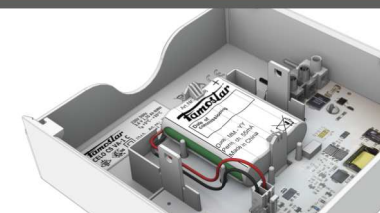

4 Change the battery every 8 years or if required autonomy isn't achieved.
Write the installation date on the battery label of the new installed battery.

SPECIFICATION

Type	Voltage	Power consumption*	Current*	Power factor
CELO CW VPA-1	230 V / 50 Hz	2,5 W / 4,6 VA	20 mA	0,55
CELO CW V-230	230 V / AC/DC	2,75 W / 5,3 VA	23 mA	0,51

*maximum values at switched-on light source and not fully charged battery



ATTENTION: The luminaire should be positioned so that prolonged staring into the luminaire at a distance closer than 0,45 meter is not expected.

Mounting	Installation on normal flammable surfaces.
Only for fixed mounting	Use XMVK, YMKV or equivalent
Temperature range	+5 °C till +30 °C (V-230 +5 °C till +40 °C)
Dimensions	See www.famostar.nl
Autonomy	1 hour
Light source	Led
Rated lumen output	180 Lumen
Battery	3,6 V 1,1 Ah NIMH (AA cell)
Protection rate	IP 40
ATS	Automatic Test System (IEC 62034)
Insulation class	Class II, double insulated (no ground connection needed).
Material	Polycarbonate (PC)

Warranty, accessories and spacing tables and further information see www.famostar.nl.



CELO Wall